

Transfer Ownership node - Source public version

The transfer ownership node has two main functions in ownership systems:

- To manage the transfer of flow between owners at a given point in an ownership system; or
- To act as a boundary between adjacent ownership systems by managing the transfer of orders and flow at the boundary.

This node is not available in Source (public version).